

Experiment No. 1


AIM: Installation and Configuration of Flutter Environment.


Step 1: Download the installation bundle of the Flutter Software Development Kit for windows. To download Flutter SDK, Go to its official website https://docs.flutter.dev/get-started/install, you will get the following screen.

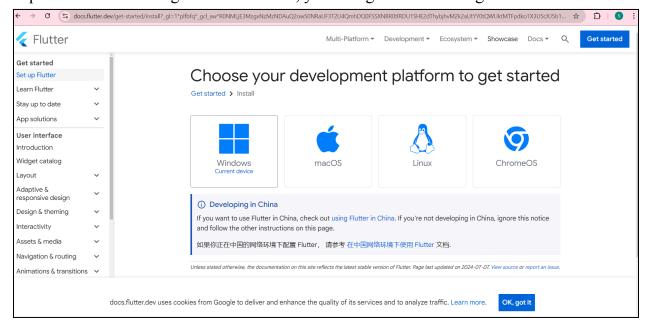


Step 2: Next, to download the latest Flutter SDK, click on the Windows icon and then select Android. Here, you will find system requirements and the download link for SDK.

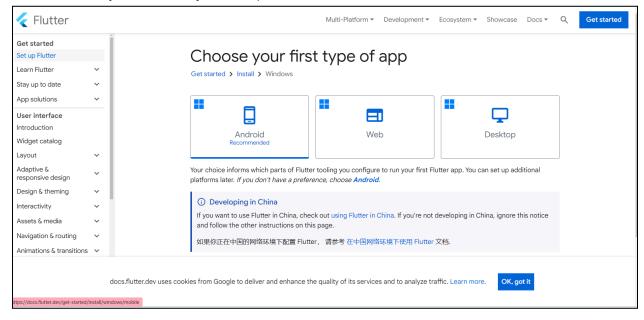

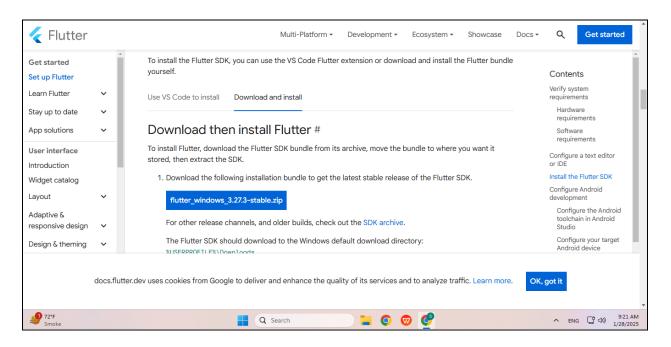


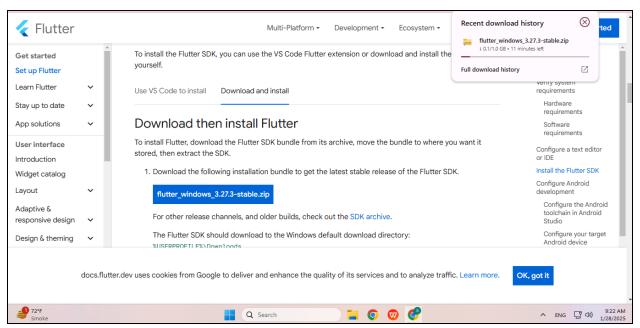

Step 3: When your download is complete, extract the zip file and place it in the desired installation folder or location, for example, C: /Flutter. (Here I have created Flutter folder in C drive and inside that created src folder and extracted in it.)

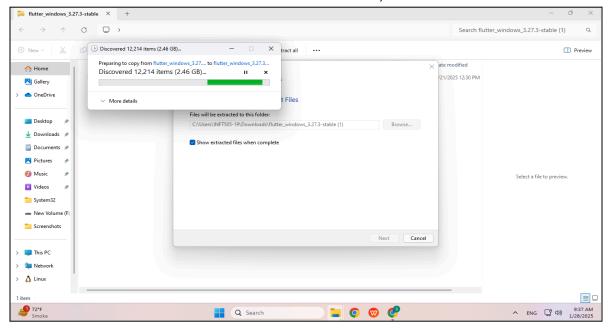

Step 4: Now run flutter doctor command in that folder bin directory we will get to know the status and what is remaining to install

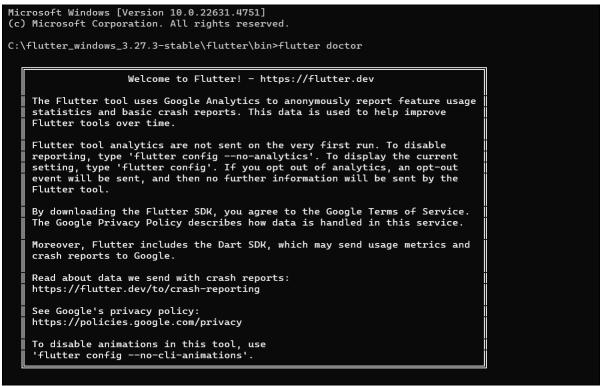


```
Doctor summary (to see all details, run flutter doctor -v): [f] Flutter (Channel stable, 3.27.3, on Microsoft Windows [Version 10.0.22631.4751], locale en-IN) [f] Windows Version (Installed version of Windows is version 10 or higher)
     Android toolchain - develop for Android devices
        Unable to locate Android SDK.
        Install Android Studio from: https://developer.android.com/studio/index.html
On first launch it will assist you in installing the Android SDK components.
        (or visit https://flutter.dev/to/windows-android-setup for detailed instructions).
        If the Android SDK has been installed to a custom location, please use
        'flutter config --android-sdk' to update to that location.
[/] Chrome - develop for the web
     Visual Studio - develop Windows apps

X Visual Studio not installed; this is necessary to develop Windows apps.

Download at https://visualstudio.microsoft.com/downloads/.

Please install the "Desktop development with C++" workload, including all of its default components
 !] Android Studio (not installed)
     VS Code (version 1.96.4)
Connected device (3 available)
 Network resources
! Doctor found issues in 3 categories.
The Flutter CLI developer tool uses Google Analytics to report usage and diagnostic
data along with package dependencies, and crash reporting to send basic crash
reports. This data is used to help improve the Dart platform, Flutter framework,
and related tools.
Telemetry is not sent on the very first run. To disable reporting of telemetry,
run this terminal command:
     flutter --disable-analytics
If you opt out of telemetry, an opt-out event will be sent, and then no further information will be sent. This data is collected in accordance with the Google
Privacy Policy (https://policies.google.com/privacy).
```

Step 5: To run the Flutter command in regular windows console, you need to update the system path to include the flutter bin directory. The following steps are required to do this: Step 5.1: Search for environment variables in search bar -> advanced tab -> environment variables. You will get the following screen.

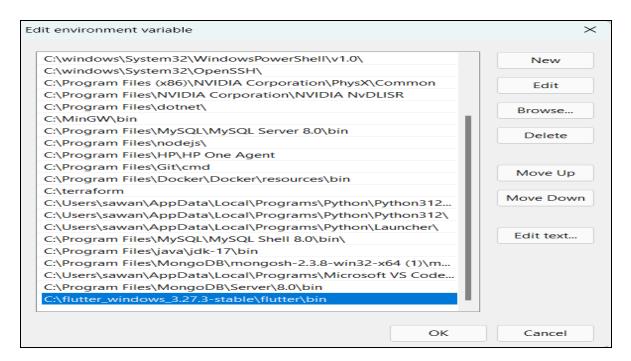

Step 6: Now, run the \$ flutter command in command prompt.

```
C:\Users\siddi>flutter
Manage your Flutter app development.
Common commands:
  flutter create <output directory>
      Create a new Flutter project in the specified directory.
  flutter run [options]
Run your Flutter application on an attached device or in an emulator.
Usage: flutter <command> [arguments]
Global options:
-h, --help
-v, --verbose
                                          Print this usage information.
                                          Noisy logging, including all shell commands executed.

If used with "--help", shows hidden options. If used with "flutter doctor", shows additional diagnostic information. (Use "-vv" to force verbose logging in those cases.)

Target device id or name (prefixes allowed).

Reports the version of this tool.
-d, --device-id
      --version
     --version
--enable-analytics
--disable-analytics
                                          Enable telemetry reporting each time a flutter or dart command runs.
                                          Disable telemetry reporting each time a flutter or dart command runs, until it is
                                           re-enabled.
                                           Suppress analytics reporting for the current CLI invocation.
      --suppress-analytics
Available commands:
Flutter SDK
  bash-completion Output command line shell completion setup scripts. channel List or switch Flutter channels.
                             List or switch Flutter channels.

Configure Flutter settings.

Show information about the installed tooling.

Downgrade Flutter to the last active version for the current channel.

Populate the Flutter tool's cache of binary artifacts.

Upgrade your copy of Flutter.
  config
  doctor
   downgrade
   precache
  upgrade
```

Step 7:Now, run the \$ flutter doctor command. This command checks for all the requirements of Flutter app development and displays a report of the status of your Flutter installation.

Step 8: When you run the above command, it will analyze the system and show its report, as shown in the below image. Here, you will find the details of all missing tools, which required to run Flutter as well as the development tools that are available but not connected with the device.

```
C:\Users\siddi>flutter doctor

Doctor summary (to see all details, run flutter doctor -v):

[/] Flutter (Channel stable, 3.24.0, on Microsoft Windows [Version 10.0.22631.4751], locale en-IN)

[/] Windows Version (Installed version of Windows is version 10 or higher)

[/] Android toolchain - develop for Android devices (Android SDK version 35.0.0)

[/] Chrome - develop for the web

[!] Visual Studio - develop Windows apps (Visual Studio Build Tools 2019 16.11.38)

X The current Visual Studio installation is incomplete.

Please use Visual Studio Installer to complete the installation or reinstall Visual Studio.

[/] Android Studio (version 2024.1)

[/] VS Code (version 1.96.4)

[/] Connected device (3 available)


[/] Network resources

! Doctor found issues in 1 category.


C:\Users\siddi>
```

Step 9: Install the Android SDK. If the flutter doctor command does not find the Android SDK tool in your system, then you need first to install the Android Studio IDE. To install Android Studio IDE, do the following steps.


Step 9.1: Download the latest Android Studio executable or zip file from the official site by accepting terms and conditions.

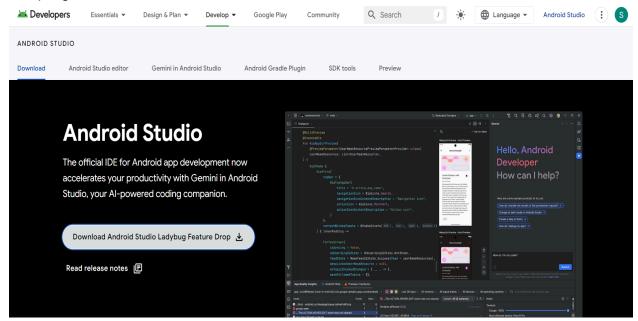


Step 9.2: When the download is complete, open the .exe file and run it. You will get the following dialog box.

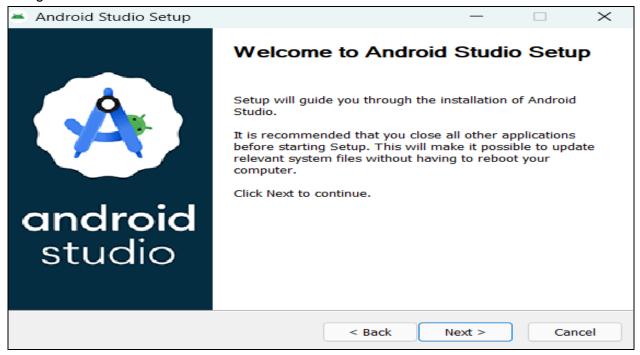


Step 9.3: Follow the steps of the installation wizard and also select installation location.

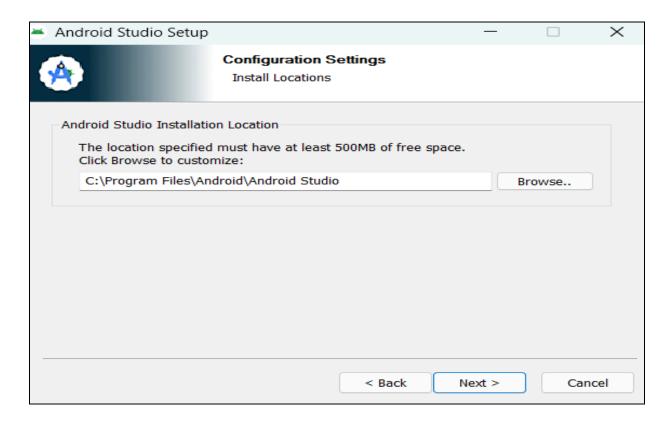


Step 9.4:Once the installation wizard completes, you will get the following screen.

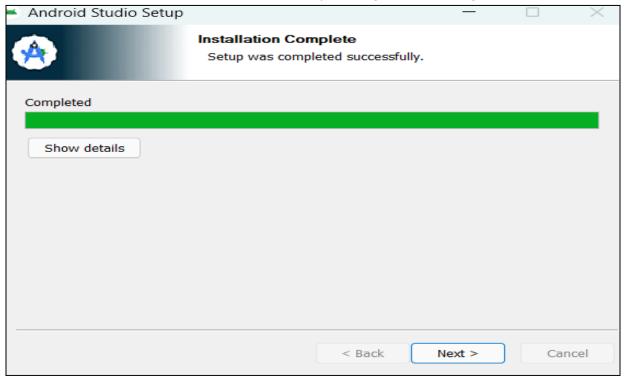


Step 9.5: In the above screen, click Next-> Finish. Once the Finish button is clicked, you need to choose the 'Don't import Settings option' and click OK. It will start the Android Studio. Also click on Don't send so that your data will not get shared with android studio.

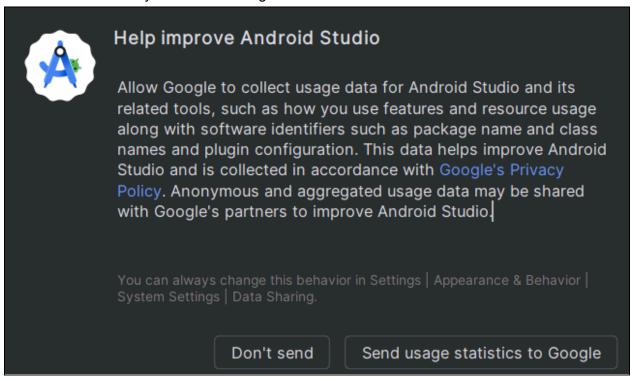

Step 9.6: Now you will see android studio setup wizard. Click next

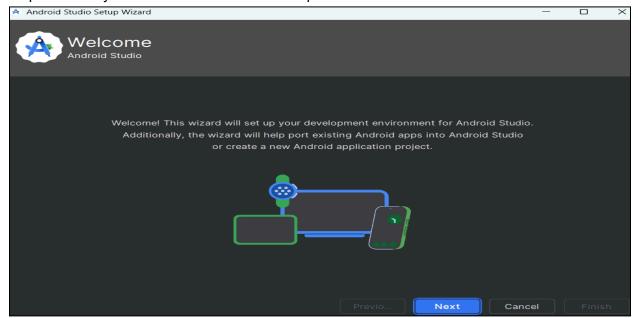



Step 9.7: Select Standard then Next -> Next -> Accept -> Finish.

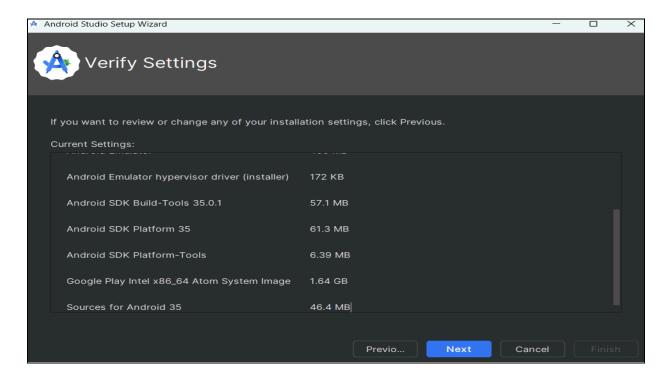


Step 9.8: Now you will see following downloading components wizard. After finishing download click on Finish.

Step 9.9: run the \$ flutter doctor command and Run flutter doctor --android-licenses command. Step 9.10: Now open android studio you will see the following window. Click on more actions-> Import an android code Sample -> select Android SDK command-line tools (latest) this will download command-line tools.

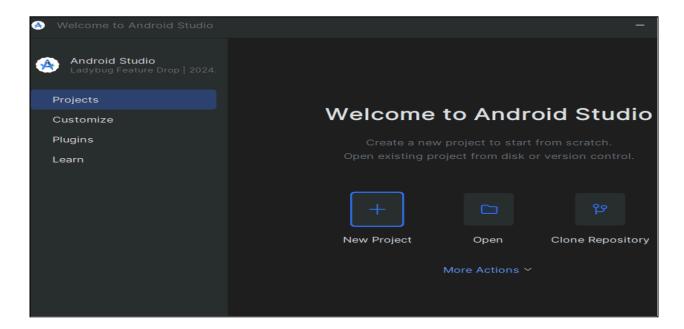

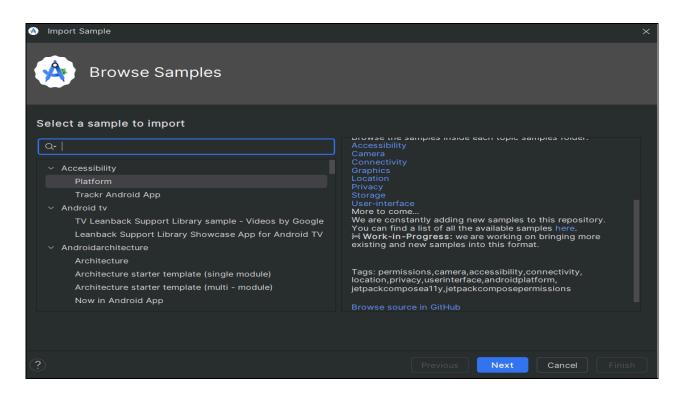

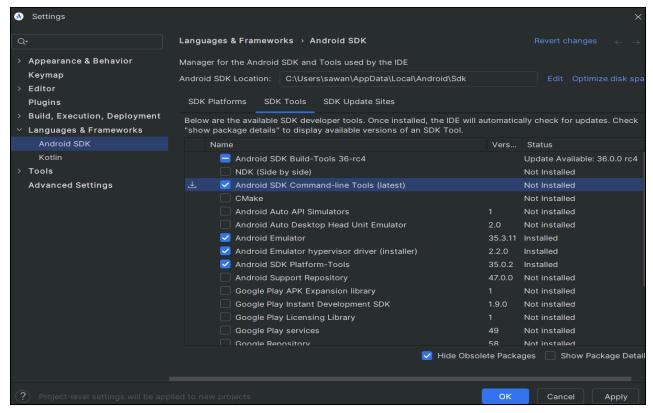



Step 10: Next, you need to set up an Android emulator. It is responsible for running and testing the Flutter application.

Step 10.1: To set an Android emulator, go to Android Studio > Tools > Android > AVD Manager and select Create Virtual Device. Or, go to Help->Find Action->Type Emulator in the search box. You will get the following screen.


Step 10.2: Choose your device definition and click on Next.

Step 10.3: Select the system image for the latest Android version and click on Next.


Step 10.4: Now, verify the all AVD configuration. Select Hardware in graphics. If it is correct, click on Finish




Step 10.5: Last, click on the icon pointed into the rectangle. The Android emulator displayed as below screen.

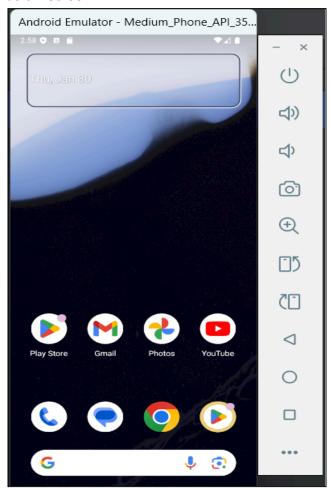

Step 11: Next, you need to install flutter plugin . Go to plugins ->Install Flutter plugin(it will automatically install dart) and then restart android studio. These plugins provide a template to create a Flutter application, give an option to run and debug Flutter application in the Android Studio itself

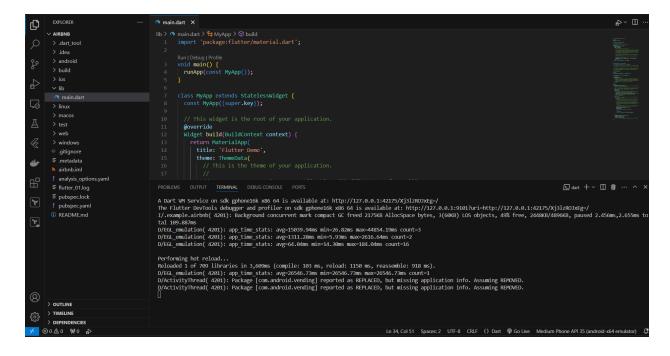

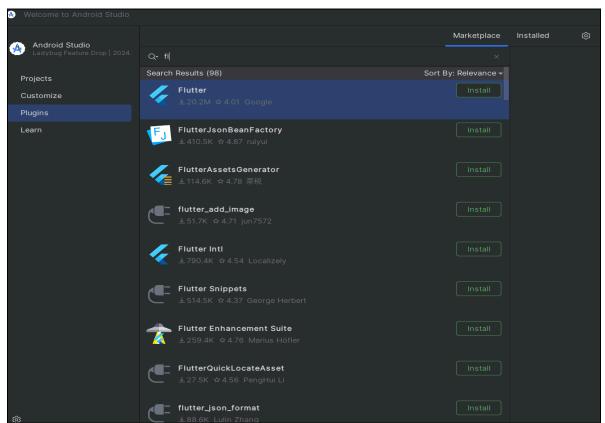

Step 12: Next, click on new Flutter project and provide SDK path ->Next. Step 12.1: Next, provide name of the project -> select project location -> create.

